

Link do produktu: <https://mig.bytom.pl/bateria-do-acer-aspire-5740g-11-1v-4400mah-p-17631.html>

Bateria do Acer Aspire 5740G 11,1V 4400mAh



Cena brutto	94,00 zł
Cena netto	76,42 zł
Dostępność	Dostępny
Czas wysyłki	24 godziny
Numer katalogowy	1AZGCENB00000003
Kod producenta	AC06
Kod EAN	5902701410087

Opis produktu

Bateria do Acer Aspire 5740G 11,1V 4400mAh

- Bateria Green Cell to wysokiej jakości model przeznaczony do laptopa Acer Aspire 5741 5741G 5742 5742G 5750 5750G E1-521 E1-531 E1-571. Akumulator jest wyposażony w wytrzymałe i wydajne ogniwa Green Cell, co gwarantuje niezawodność i długi czas pracy. Bateria jest starannie zaprojektowanym modelem dedykowanym do konkretnego laptopa, co zapewnia bezpieczną pracę i pełną sprawność komputera.
- Oryginalna bateria Green Cell do Twojego laptopa
- Wysoka wydajność dzięki zastosowaniu ogniw Green Cell
- Perfekcyjna kompatybilność dzięki idealnemu odwzorowaniu elektroniki

Liczba komór (baterie):
Napięcie:
Pasuje do:

6
11.1
Acer Aspire 5250;Acer TravelMate 5740G;Acer TravelMate 5740Z;Acer TravelMate 5742;Acer TravelMate 5742G;Acer TravelMate 5742ZG;Acer TravelMate 7740G;Acer TravelMate 7740Z;Acer TravelMate 7740ZG;Acer TravelMate 8572TG;Packard Bell EasyNote;Acer Aspire V3-571G;Acer Aspire 4741ZG;Acer Aspire E1-451G;Acer Aspire E1-471G;Acer Aspire E1-531G;Acer Aspire E1-571G;Acer Aspire E1-771G;Acer Aspire E1-772G;Acer Aspire V3-531G;Acer Aspire V3-551G;Acer Aspire V3-771G;Acer Aspire V3-772G;Acer TravelMate 4740;Acer TravelMate 4750;Acer TravelMate 4750G;Acer TravelMate 5335;Acer TravelMate 5344;Acer TravelMate 5360;Acer TravelMate 5542;Acer TravelMate 5542G;Acer TravelMate 5735Z;Acer TravelMate 5742Z;Acer TravelMate 5744Z;Acer TravelMate 5760;Acer TravelMate 5760G;Acer TravelMate 6495T;Acer TravelMate 6495TG;Acer TravelMate 6595;Acer TravelMate 7750;Acer TravelMate 7750G;Acer TravelMate 7750Z;Acer TravelMate 8472;Acer TravelMate 8472G;Acer TravelMate 8472T;Acer TravelMate 8472TG;Acer TravelMate 8473;Acer TravelMate 8473T;Acer TravelMate 8473TG;Acer TravelMate 8572G;Acer TravelMate 8573;Acer TravelMate 8573T;Acer TravelMate 8573TG;Acer TravelMate P243-M;Acer TravelMate P243-MG;Acer TravelMate P253-E;Acer TravelMate P253-M;Acer TravelMate P273-M;Acer TravelMate P453-M;Acer TravelMate P453-MG;Acer TravelMate P653-M;Acer TravelMate P653-MG;Acer TravelMate P653-V;Packard Bell EasyNote LE11-BZ;Packard Bell EasyNote LE69-KB;Packard Bell EasyNote LM81-RB;Packard Bell

EasyNote LM81-SB;Packard Bell EasyNote LM82-RB;Packard
Bell EasyNote LM83-RB;Packard Bell EasyNote
LM83-SB;Packard Bell EasyNote LM85-GU;Packard Bell
EasyNote LM85-JN;Packard Bell EasyNote LM85-JO;Packard Bell
EasyNote LM85-JU;Packard Bell EasyNote LM86-GN;Packard
Bell EasyNote LM86-GO;Packard Bell EasyNote
LM86-GU;Packard Bell EasyNote LM86-JN;Packard Bell
EasyNote LM86-JO;Packard Bell EasyNote LM87-JN;Packard Bell
EasyNote LM87-JO;Packard Bell EasyNote LM87-JU;Packard Bell
EasyNote LM94-RB;Packard Bell EasyNote LM94-SB;Packard
Bell EasyNote LM98-AU;Packard Bell EasyNote
LM98-CP;Packard Bell EasyNote LM98-GO;Packard Bell
EasyNote LM98-GU;Packard Bell EasyNote LM98-JN;Packard
Bell EasyNote LM98-JO;Packard Bell EasyNote LM98-JU;Packard
Bell EasyNote LS11-HR;Packard Bell EasyNote LS11-SB;Packard
Bell EasyNote LS13-HR;Packard Bell EasyNote LS13-SB;Packard
Bell EasyNote LS44-HR;Packard Bell EasyNote LS44-SB;Packard
Bell EasyNote LV11-HC;Packard Bell EasyNote
LV44-HC;Packard Bell EasyNote NE11-HC;Packard Bell
EasyNote NM85-GN;Packard Bell EasyNote NM85-GO;Packard
Bell EasyNote NM85-GU;Packard Bell EasyNote
NM85-JN;Packard Bell EasyNote NM85-JU;Packard Bell
EasyNote NM86-GN;Packard Bell EasyNote NM86-JN;Packard
Bell EasyNote NM87-GN;Packard Bell EasyNote
NM87-JN;Packard Bell EasyNote NM87-JO;Packard Bell
EasyNote NM98-GU;Packard Bell EasyNote NM98-JN;Packard
Bell EasyNote NM98-JU;Packard Bell EasyNote
NS11-HR;Packard Bell EasyNote NS44-HR;Packard Bell
EasyNote NS45-HR;Packard Bell EasyNote NS85-JN;Packard
Bell EasyNote TE11-BZ;Packard Bell EasyNote
TE11-HC;Packard Bell EasyNote TE11-HR;Packard Bell
EasyNote TK11-BZ;Packard Bell EasyNote TK13-BZ;Packard
Bell EasyNote TK36-AU;Packard Bell EasyNote
TK36-AV;Packard Bell EasyNote TK36-CV;Packard Bell
EasyNote TK36-RV;Packard Bell EasyNote TK37-AU;Packard
Bell EasyNote TK37-AV;Packard Bell EasyNote
TK81-RB;Packard Bell EasyNote TK81-SB;Packard Bell
EasyNote TK83-RB;Packard Bell EasyNote TK83-SB;Packard
Bell EasyNote TK85-CV;Packard Bell EasyNote
TK85-GN;Packard Bell EasyNote TK85-GO;Packard Bell
EasyNote TK85-GU;Packard Bell EasyNote TK85-JN;Packard Bell
EasyNote TK85-JO;Packard Bell EasyNote TK85-SB;Packard Bell
EasyNote TK87-GN;Packard Bell EasyNote TK87-GO;Packard
Bell EasyNote TK87-GU;Packard Bell EasyNote TK87-JN;Packard
Bell EasyNote TK87-JU;Packard Bell EasyNote TM01-RB;Packard
Bell EasyNote TM01-SB;Packard Bell EasyNote
TM05-GU;Packard Bell EasyNote TM05-JN;Packard Bell
EasyNote TM80-RB;Packard Bell EasyNote TM81-RB;Packard
Bell EasyNote TM81-SB;Packard Bell EasyNote
TM82-RB;Packard Bell EasyNote TM82-SB;Packard Bell
EasyNote TM83-RB;Packard Bell EasyNote TM83-SB;Packard
Bell EasyNote TM85-GN;Packard Bell EasyNote
TM85-GO;Packard Bell EasyNote TM85-JN;Packard Bell
EasyNote TM85-JO;Packard Bell EasyNote TM85-JU;Packard Bell
EasyNote TM86-GN;Packard Bell EasyNote TM86-JO;Packard
Bell EasyNote TM86-JP;Packard Bell EasyNote
TM87-GN;Packard Bell EasyNote TM87-GU;Packard Bell
EasyNote TM87-JN;Packard Bell EasyNote TM87-JO;Packard Bell
EasyNote TM89-GN;Packard Bell EasyNote TM89-GU;Packard
Bell EasyNote TM93-RB;Packard Bell EasyNote
TM94-RB;Packard Bell EasyNote TM94-SB;Packard Bell
EasyNote TM97-GN;Packard Bell EasyNote TM98-GN;Packard
Bell EasyNote TM98-JO;Packard Bell EasyNote
TM99-GN;Packard Bell EasyNote TS11-HR;Packard Bell
EasyNote TS11-SB;Packard Bell EasyNote TS13-HR;Packard
Bell EasyNote TS13-SB;Packard Bell EasyNote
TS44-HR;Packard Bell EasyNote TS44-SB;Packard Bell
EasyNote TS45-HR;Packard Bell EasyNote TS45-SB;Packard
Bell EasyNote TSX62-HR;Packard Bell EasyNote

TSX66-HR;Packard Bell EasyNote TV11-CM;Packard Bell EasyNote TV11-HC;Packard Bell EasyNote TV43-CM;Packard Bell EasyNote TV43-HC;Packard Bell EasyNote TV44-CM;Packard Bell EasyNote TV44-HC;Packard Bell EasyNote TV44-HR;Packard Bell ENLE69-KB;Acer Aspire 4251;Acer Aspire 4253G;Acer Aspire 4333;Acer Aspire 4339;Acer Aspire 4551;Acer Aspire 4551G;Acer Aspire 4552;Acer Aspire 4552G;Acer Aspire 4560;Acer Aspire 4560G;Acer Aspire 4591;Acer Aspire 4738;Acer Aspire 4738G;Acer Aspire 4738Z;Acer Aspire 4738ZG;Acer Aspire 4739;Acer Aspire 4741;Acer Aspire 4741G;Acer Aspire 4741Z;Acer Aspire 4743Z;Acer Aspire 4743ZG;Acer Aspire 4749;Acer Aspire 4749Z;Acer Aspire 4750;Acer Aspire 4750G;Acer Aspire 4750Z;Acer Aspire 4750ZG;Acer Aspire 4752;Acer Aspire 5251;Acer Aspire 5252;Acer Aspire 5333;Acer Aspire 5336;Acer Aspire 5342;Acer Aspire 5349;Acer Aspire 5350;Acer Aspire 5551;Acer Aspire 5551G;Acer Aspire 5552;Acer Aspire 5552NWXMi;Acer Aspire 5736;Acer Aspire 5736G;Acer Aspire 5736Z;Acer Aspire 5741;Acer Aspire 5741A;Acer Aspire 5741G;Acer Aspire 5741Z;Acer Aspire 5741ZG;Acer Aspire 5742;Acer Aspire 5742G;Acer Aspire 5742Z;Acer Aspire 5742ZG;Acer Aspire 5750ZG;Acer Aspire 5755;Acer Aspire 5755G;Acer Aspire 5755Z;Acer Aspire 5755ZG;Acer Aspire 7251;Acer Aspire 7551;Acer Aspire 7551G;Acer Aspire 7552;Acer Aspire 7552G;Acer Aspire 7560;Acer Aspire 7560G;Acer Aspire 7710G;Acer Aspire 7741;Acer Aspire 7741G;Acer Aspire 7741Z;Acer Aspire 7741ZG;Acer Aspire 7750Z;Acer Aspire 7750ZG;Acer Aspire E1;Acer Aspire E1-571;Acer TravelMate 4740G;Acer TravelMate 4740Z;Acer TravelMate 4750Z;Acer TravelMate 4750ZG;Acer TravelMate 5340;Acer TravelMate 5340G;Acer TravelMate 5360G;Acer TravelMate 5735;Acer TravelMate 5735G;Acer TravelMate 5735ZG;Acer TravelMate 5740;Acer TravelMate 5760Z;Acer TravelMate 5760ZG;Acer TravelMate P243;Acer TravelMate P253;Acer TravelMate P273;Acer TravelMate P453;Acer TravelMate P653;eMachines D440;eMachines D442;eMachines D443;eMachines D528;eMachines D529;eMachines D640;eMachines D642;eMachines D644;eMachines D728;eMachines D729;eMachines D730;eMachines D732;eMachines D732G;eMachines D732Z;eMachines D732ZG;eMachines E440;eMachines E442;eMachines E443;eMachines E529;eMachines E640;eMachines E640G;eMachines E642;eMachines E642G;eMachines E644;eMachines E644G;eMachines E729Z;eMachines E730;eMachines E730G;eMachines E730Z;eMachines E732;eMachines G640;eMachines G640G;eMachines G730;eMachines G730Z;eMachines G730ZG;Gateway NV55S;Gateway NV57;Gateway NV57H;Gateway NV59C;Gateway NV76R;Gateway NV77H;Gateway NV77H34u;Acer Aspire E1-531;Acer Aspire V3;Acer Aspire V3-551;Acer Aspire V3-571;Acer Aspire V3-731;Acer Aspire V3-771;Gateway NV75S;Acer Aspire 5253;Acer Aspire 5253G;Acer Aspire 5552G;Acer Aspire 5560;Acer Aspire 5560G;Acer Aspire 5733;Acer Aspire 5733Z;Acer Aspire 5749;Acer Aspire 5749G;Acer Aspire 5749Z;Acer Aspire 5749ZG;Acer Aspire 5750;Acer Aspire 5750G;Acer Aspire 5750TG;Acer Aspire 5750Z;Acer Aspire 7551Z;Acer Aspire 7551ZG;Acer Aspire 7750;Acer Aspire 7750G;Acer TravelMate 5740ZG;Acer TravelMate 5744;Acer TravelMate 5744G;Acer TravelMate 7740;Acer TravelMate 8572;Acer TravelMate 8572T;Acer TravelMate 8572Z;eMachines E729;eMachines E730ZG;eMachines E732G;eMachines E732Z;eMachines E732ZG;eMachines G730G;Gateway NE46R;Gateway NE51B;Gateway NE56R;Gateway NE71B;Gateway NE722;Gateway NV51;Gateway NV53A;Gateway NV53A11u;Gateway NV53A24U;Gateway NV53A52U;Gateway NV55C;Gateway NV73A;Gateway NV79;Gateway NV79C;Gateway NV79C27U;Acer Aspire 4250;Acer Aspire

Pojemność baterii:
Typ ogniwa:
Zastępuje baterie:

4250G;Acer Aspire 4250Z;Acer Aspire 4251G;Acer Aspire 4251Z;Acer Aspire 4252;Acer Aspire 4252G;Acer Aspire 4252Z;Acer Aspire 4253;Acer Aspire 4349;Acer Aspire 4350;Acer Aspire 4350G;Acer Aspire 4352;Acer Aspire 4352G;Acer Aspire 4551P;Acer Aspire 4733;Acer Aspire 4733Z;Acer Aspire 4739Z;Acer Aspire 4743;Acer Aspire 4743G;Acer Aspire 4752G;Acer Aspire 4752Z;Acer Aspire 4752ZG;Acer Aspire 4755;Acer Aspire 4755G;Acer Aspire 4755ZG;Acer Aspire 4771;Acer Aspire 4771G;Acer Aspire 4771Z;Acer Aspire 5560G;Acer Aspire E1-421;Acer Aspire E1-431;Acer Aspire E1-471;Acer Aspire E1-521;Acer Aspire E1-731;Acer Aspire E1-731G;Acer Aspire E1-771;Acer Aspire V3-471;Acer Aspire V3-471G;Acer Aspire V3-531;Acer Aspire V3-731G;Acer TravelMate 4350;Acer TravelMate 4370;Acer TravelMate 4740ZG;Acer TravelMate 4750GZ;Acer TravelMate 6495;Acer TravelMate 6495G;Acer TravelMate 6595G;Acer TravelMate 6595T;Acer TravelMate 6595TG;Acer TravelMate 7340;Acer TravelMate 7750ZG;Acer TravelMate 8472Z;Acer TravelMate 8473G;Acer TravelMate 8473Z;Acer TravelMate 8573G;eMachines D640G;eMachines D729Z;eMachines D730G;eMachines D730Z;eMachines D730ZG;eMachines E650;eMachines MS2305;Gateway NS41;Gateway NS41C;Gateway NS41I;Gateway NS51;Gateway NS51C;Gateway NS51I;Gateway NV47;Gateway NV47H;Gateway NV49C;Gateway NV49C13C;Gateway NV49xx;Gateway NV50A;Gateway NV51B;Gateway NV51M;Packard Bell ENLE69;
4400
Li-ion
AS07B31 AS07B32 AS07B41 AS07B42 AS07B51 AS07B52 AS07B61 AS07B71 AS07B72 JDW50